

Operating instruction eBunker.

Safety Notes

General Safety Warnings



⚠ WARNING Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

1) Work area safety

- a) Keep children and bystanders away while operating the eBunker. Anyone entering the work area must wear personal protective equipment.

2) Electrical safety

- a) Do not expose eBunker to rain or wet conditions. Water entering the eBunker will increase the risk of electric shock.

3) Personal safety

- a) Stay alert, watch what you are doing and use common sense when operating the eBunker. Do not use the eBunker while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating the eBunker may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection and safety shoes.
- c) Prevent unintentional starting. Ensure the ON/OFF switch is in the off-position before connecting the batterypack, picking up or carrying the eBunker. Never carry the eBunker with your fingers on the ON/OFF switch.
- d) Remove any adjusting key or wrench before turning the eBunker on. A wrench or a key left attached to a rotating part of the eBunker may result in personal injury.
- e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the eBunker in unexpected situations.
- f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

4) eBunker use and care

- a) Do not force the eBunker.
- b) Do not use the eBunker if the switch does not turn it on and off. If the eBunker cannot be controlled with the ON/OFF switch it is dangerous and must be repaired.
- c) Disconnect the battery pack from the eBunker before making any adjustments, changing knife or storing. Such preventive safety measures reduce the risk of starting the eBunker accidentally.
- d) Store the eBunker out of the reach of children and do not allow persons unfamiliar with the eBunker or these instructions to operate it. The eBunker is dangerous in the hands of untrained users.
- e) Maintain the eBunker. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the ebunker operation. If damaged, have it repaired before use.
- f) Keep knife sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

Operating instruction eBunker.




Intended Use

The machine is intended for trimming the vertical edges of the bunkers on a golf course.

Product features

The numbering of the product features refers to the illustration of the eBunker.

- 1 ON/OFF switch
- 2 Adjustable handle
- 3 Adjustment nut to the top handle
- 4 Battery
- 5 Battery unlocking button
- 6 Spindle lock button
- 7 Spindle
- 8 Locking screw for protection guard/lan
- 9 Protection guard/lan
- 10 Mounting flange with O-ring
- 11 Reversible knife
- 12 Clamping nut
- 13 Button for charge-control indicator
- 14 Battery charge-control indicator

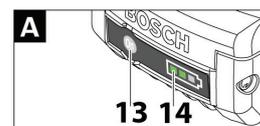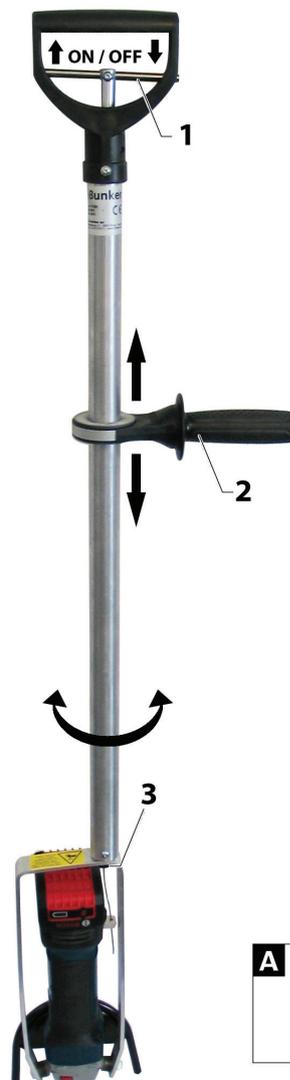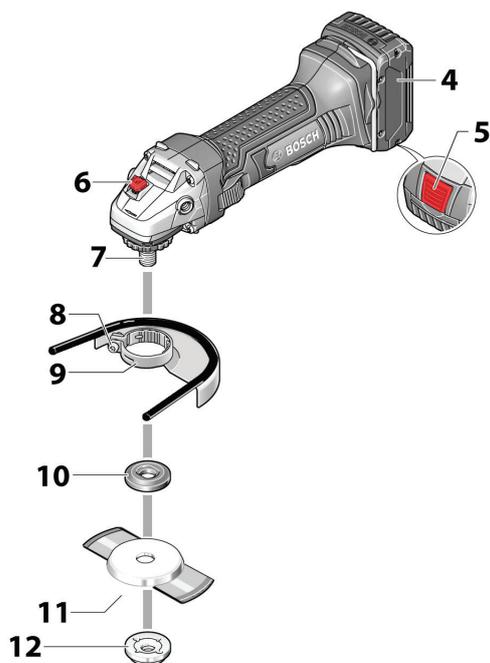

Operating instruction eBunker.

Before using the eBunker


Battery charging

Note: The battery is supplied partially charged. To ensure full capacity of the battery, completely charge the battery in the battery charger before using the eBunker for the first time. The lithium ion battery can be charged at any time without reducing its service life. Interrupting the charging procedure does not damage the battery.

The lithium ion battery is protected against deep discharging by the “Electronic Cell Protection (ECP)”. When the battery is empty, the machine is switched off by means of a protective circuit: The inserted tool no longer rotates.

Inserting the Battery

The battery 4 is equipped with two locking levels that should prevent the battery from falling out when pushing the battery unlocking button 5 unintentionally. As long as the battery is inserted in the eBunker, it is held in position by means of a spring. To remove the battery 4, press the unlocking button 5 and pull out the battery toward the front. Do not exert any force. Battery Charge-control Indication (only for 3.0 Ah battery) (see figure A) The three green LEDs of the battery charge-control indicator 14 indicate the charge condition of the battery 4. For safety reasons, it is only possible to check the status of the charge condition when the eBunker is at a standstill. Press button 13 to indicate the charge condition. This is also possible when the battery 4 is removed.

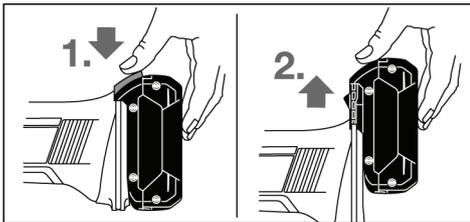

LED	Capacity
Continuous lighting 3 x green	$\geq 2/3$
Continuous lighting 2 x green	$\geq 1/3$
Continuous lighting 1 x green	$< 1/3$
Flashing light 1 x green	Reserve


When no LED lights up after pushing button 13, then the battery is defective and must be replaced.

Start and stop

To start the eBunker, pull the ON/OFF switch (1) up towards the handle and maintain the switch in this position. To switch off the machine, release the ON/OFF switch.

Replacing knife

IMPORTANT: Always disconnect the battery pack before replacing the knife. Remove the knife by pressing the spindle lock button (6) and loosen the clamping nut (12) with the two-pin spanner. To fasten the knife screw on the clamping nut (12) and tighten with the two-pin spanner. After replacement and before switching on, check that the knife is correctly mounted and that it can turn freely.

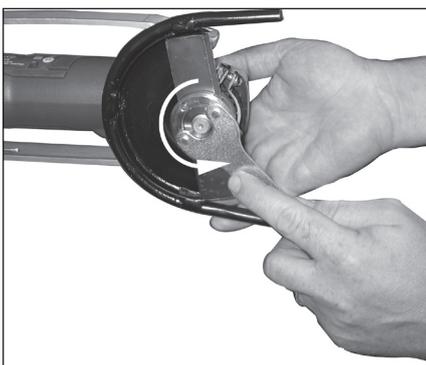

Declaration of Conformity



We declare under our sole responsibility that the product is in conformity with the following standards or standardization documents: EN 60745 according to the provisions of the directives 2004/108/EC, 98/37/EC (until 28 Dec 2009), 2006/42/EC (from 29 Dec 2009).

A handwritten signature in black ink, appearing to read 'Finn Skade Hansen'.

Finn Skade Hansen
Managing Director

Protection of the environment

Batteries must not be disposed into household waste, water or fire.

Batteries must be collected, recycled or disposed of in an environmentally-friendly way.

Power tools, accessories and packaging should be sorted for environmental-friendly recycling.

Only for EC countries:

Do not dispose of power tools into household waste! According to the European Directive 2002/96/EC on waste electrical and electronic equipment and its incorporation into national law, power tools that are no longer suitable for use must be separately collected and sent for recovery in an environmental-friendly manner.

Service and customer Assistance

FSH machines aps

Klokkestøbervej 31

8800 Viborg

Denmark

Phone: +45 87 25 00 15

info@fshmachines.com

www.fshmachines.com